

## WASHING MACHINE/DRYER – Ariston (Max Load 4kg)



### Wash Function

1. To **START Wash** mode, select the **SHIRT icon** on the dial  
or
2. Select desired temperature settings
3. Once selection is completed, press **START BUTTON**
4. Wash cycle **approx. 1.5 - 2hrs** to complete depending on the settings selected
5. For **QUICK cycle**, please select the 30 minutes wash.
6. **CAUTION** - Do not overload the machine as it may stop during the cycle due to IE error (unbalance load)

### Dry Function

1. Once wash cycle is completed, set **DRYER mode** by either
  - a. selecting the **SUN icon** on the dial and select temperature or
  - b. selecting **DRYING mode** using either option of cupboard dry or iron dry mode.
2. Press **START**
3. **HELPFUL TIPS**
  - a. For heavy or bulky clothing, select **CUPBOARD DRY icon** mode
  - b. For light clothing or small drying load, select **IRON DRY icon** mode

### PLEASE NOTE

- Do not overuse washing detergent as foam will leak during cycle
- Please **limit weight load to 4kg** so that the cycles run smoothly and avoid the unbalanced error on the screen.
- If the laundry weight exceeds 4kg, the wash cycle may completely stop mid stage and will not drain or complete the cycle
- Do not stop a cycle in the middle of a wash or dry. If cycle stops mid-cycle, the machine does not automatically deactivate the child lock function to allow door to open. To deactivate the child lock, turn power off at the power point. Please allow 5 minutes for machine to re-set. Cycle will need to be restarted from beginning.
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle.