

## WASHING MACHINE/DRYER – Ariston (Max Load 4kg)



### Wash Function

1. To **START Wash** mode, select the **SHIRT icon** on the dial  
or
2. Select desired temperature settings
3. Once selection is completed, press **START BUTTON**
4. Wash cycle **approx. 1.5 - 2hrs** to complete depending on the settings selected
5. For **QUICK cycle**, please select the 30 minutes wash.
6. **CAUTION** - Do not overload the machine as it may stop during the cycle due to IE error (unbalance load)


### Dry Function

1. Once wash cycle is completed, set **DRYER mode** by either
  - a. selecting the **SUN icon** on the dial and select temperature or
  - b. selecting **DRYING mode** using either option of cupboard dry or iron dry mode.
2. Press **START**
3. **HELPFUL TIPS**
  - a. For heavy or bulky clothing, select **CUPBOARD DRY icon** mode
  - b. For light clothing or small drying load, select **IRON DRY icon** mode

### PLEASE NOTE

- Do not overuse washing detergent as foam will leak during cycle
- Please **limit weight load to 4kg** so that the cycles run smoothly and avoid the unbalanced error on the screen.
- If the laundry weight exceeds 4kg, the wash cycle may completely stop mid stage and will not drain or complete the cycle
- Do not stop a cycle in the middle of a wash or dry. If cycle stops mid-cycle, the machine does not automatically deactivate the child lock function to allow door to open. To deactivate the child lock, turn power off at the power point. Please allow 5 minutes for machine to re-set. Cycle will need to be restarted from beginning.
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle.

## WASHING MACHINE/DRYER – LG WD14700RD (Max Load 4kg)

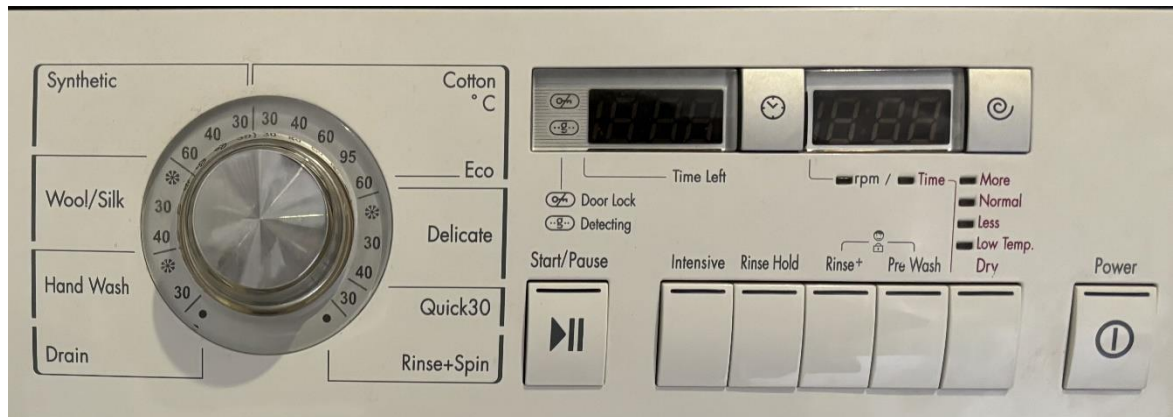

### Wash Function

1. To **START Wash** mode, select preferred option and press start
2. Once cycle starts, child lock function is activated and door cannot be opened. See notes below to open door
3. Do not stop machine mid cycle, it will not deactivate the lock
4. Please **limit weight load to 4 kg** or fill laundry to half drum load so machine runs efficiently

### Dry Function

1. To use dryer, press the **DRY** button
2. Press DRY button again to **SELECT TEMPERATURE** or other pre-set drying options
3. Dry cycle takes **minimum 2 hrs** to complete depending on selected function

### PLEASE NOTE

- Do not overuse washing detergent as foam will leak during cycle.
- Please **limit weight load to 4kg** so that the cycles run smoothly and avoid the unbalanced error on the screen
- If the laundry weight exceeds 4kg, the wash cycle may completely stop mid stage and will not drain or complete the cycle
- Do not stop a cycle in the middle of a wash or dry. If cycle stops mid-cycle, the machine does not automatically deactivate the child lock function to allow door to open. To deactivate the child lock, turn power off at the power point. Please allow 5 minutes for machine to re-set. Cycle will need to be restarted from beginning
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle.

## WASHING MACHINE/DRYER - LG WD14030RD6 (Max Load 4kg)

### Wash only Function

1. To **START Wash** mode, select preferred option and press start
2. Once cycle starts, child lock function is activated and door cannot be opened. See notes below to open door
3. Do not stop machine mid cycle, it will not deactivate the lock
4. Please **limit weight load to 4 kg** or fill laundry to half drum load so machine runs efficiently
5. **QUICK cycle** minimum 30 mins




### Dry only Function

1. For Dryer option only, **set the dial on DRY only** and select the drying mode. Button at the end of the right-hand side of the machine
2. For **light clothing**, select **iron mode** or 30, 60 or 120 mins
3. For bulky or **thick clothing**, please select **cupboard mode** option
4. Please **limit weight load to 4 kg** or fill to half drum so machine runs efficiently and avoid stopping mid-cycle
5. If you select the **washer/dryer option**, you will also need to select the **Dryer mode prior to starting the cycle**. Button at the end of the right-hand side of the machine, set either by choosing the temperature or cupboard mode or iron mode.
6. Once cycle starts, the child lock function will be activated. Please do not stop machine mid cycle as it will not deactivate the lock to allow door to open
7. Once Wash cycle is completed, it will automatically switch to Dry mode

### PLEASE NOTE

- **Both Wash AND Dry function modes can be pre-set at same time (i.e once Wash cycle is completed, automatically goes on Dry cycle). Alternatively set Wash mode and Dry mode separately after each cycle**
- Do not overuse washing detergent as foam will leak during cycle.
- Please **limit weight load to 4kg** so that the cycles run smoothly and avoid the unbalanced error on the screen.
- Do not stop a cycle in the middle of a wash or dry. The machine will not deactivate the child lock function. To deactivate the child lock, turn power off at the power point and please allow 5 mins for the machine to re-set. Cycle will need to re-start from beginning
- If the laundry weight exceeds 4kg, the wash cycle may completely stop mid-cycle and will not drain or complete the cycle
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle
- Wash AND Dry programme take minimum 4 hours

## WASHING MACHINE/DRYER - LG Thin Q (Max Load 5kg)

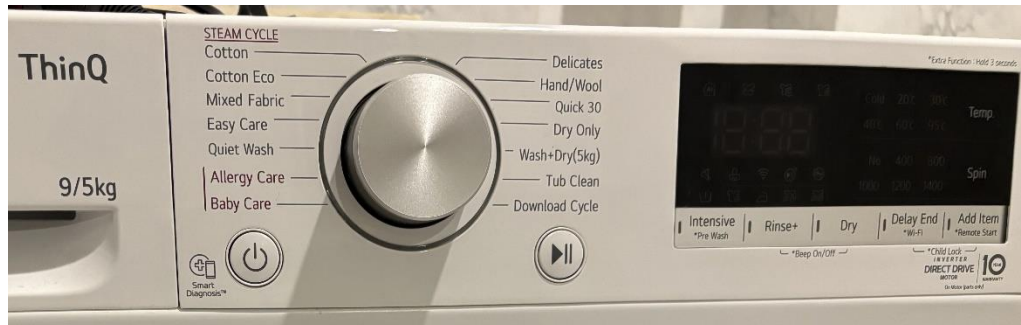

### Wash only Function

1. To **START Wash** mode, select preferred option and press start
2. Once cycle starts, child lock function is activated and door cannot be opened. See notes below to open door
3. Do not stop machine mid cycle, it will not deactivate the lock
4. Please **limit weight load to 5 kg** or fill laundry to half drum load so machine runs efficiently

### Dry only Function

1. For dry option only, **set the dial on DRY only**
2. Select the temperature and spin speed on the screen located on the right-hand side of the machine
3. Please **limit weight load to 5 kg** or fill to half drum load so machine runs efficiently
4. If you select the **washer/dryer option**, please also select the temperature and spin speed on the screen located on the right-hand side of the machine
5. Once cycle starts, the child lock function will be activated.
6. Once Wash cycle is completed, it will automatically switch to Dry mode

### PLEASE NOTE

- **Both Wash AND Dry function modes can be pre-set at same time (i.e. once Wash cycle is completed, automatically goes on Dry cycle). Alternatively set Wash mode and Dry mode separately after each cycle**
- Do not overuse washing detergent as foam will leak during cycle.
- Please **limit weight load to 5kg** so that the cycles run smoothly and avoid the unbalanced error on the screen
- If the laundry weight exceeds 5kg, the wash cycle may completely stop mid-cycle and will not drain or complete the cycle
- Do not stop a cycle in the middle of a wash or dry.
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle

## WASHING MACHINE/DRYER - Beko

### (Max Load 5kg)



### Wash only function

1. To **START Wash function only**, turn dial clockwise, select preferred option and press start
2. Once cycle starts, child lock function is activated
3. Please **limit weight load to 5 kg** or fill laundry to half the drum size so machine runs efficiently


### Dry only function

1. For **Dry function only**, turn dial anti-clockwise and select the desired option
2. Please **limit weight load to 5 kg** or fill laundry to half drum load so machine runs efficiently
3. If you select the **washer/dryer option**, please only load machine to **4kg laundry load** or fill to half drum only so machine runs efficiently
4. Once cycle starts, the child lock function will be activated
5. Once Wash cycle is completed, it will automatically switch to Dry mode

### PLEASE NOTE

- **Both Wash AND Dry function modes can be pre-set at same time (i.e once Wash cycle is completed, automatically goes on Dry cycle). Alternatively set Wash mode and Dry mode separately after each cycle**
- Do not overuse washing detergent as foam will leak during cycle.
- Please **limit weight load to 4kg or 5kg depending on the cycles selected**. This will enable the cycles run smoothly and avoid the unbalanced error on the screen
- If the laundry weight exceeds 4kg - 5kg, the wash cycle may completely stop mid-cycle and will not drain or complete the cycle
- Do not stop a cycle in the middle of a wash or dry. If cycle stops midway, cycle will need to be restarted from beginning
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle

## **WASHING MACHINE/DRYER - Haier** **(Combined Max Load 9kg)**

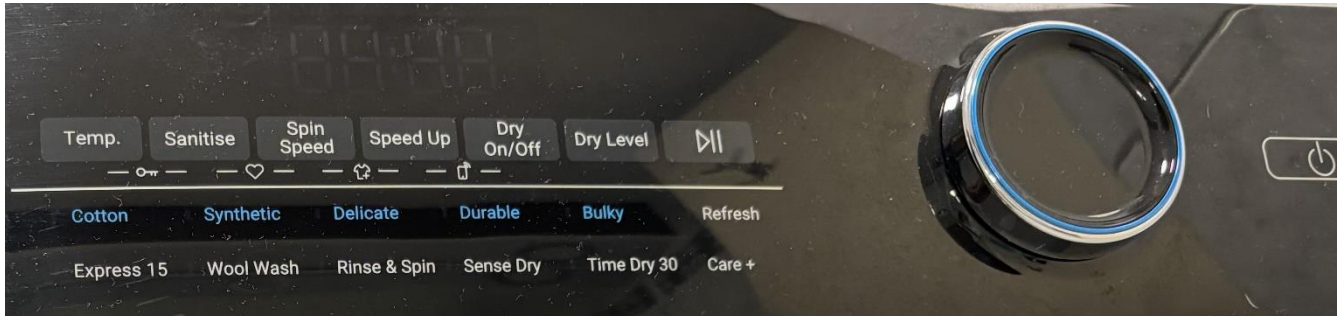

### **Wash function**

1. To **START WASH function only**, turn dial clockwise and select preferred option and press start.
2. Once cycle starts, child lock function is activated and door cannot be opened. See notes below to open door
3. Do not stop machine mid cycle, it will not deactivate the lock
4. Please **limit weight load to 6 kg** or fill laundry to half the drum size so machine runs efficiently

### **Dry function**

1. For dryer option, **press the Dryer on/off button**, then turn dial clockwise to select the desired option
2. **Turn main water tap off**
3. Please **limit weight load to 5kg** or fill to half drum load so machine runs efficiently

### **PLEASE NOTE**

- **Both Wash AND Dry function modes can be pre-set at same time (i.e once Wash cycle is completed, automatically goes on Dry cycle). Alternatively set Wash mode and Dry mode separately after each cycle**
- Do not overuse washing detergent as foam will leak during cycle.
- Please **limit weight load to 5kg - 6kg depending on the cycles selected**. This will enable the cycles run smoothly and avoid the unbalanced error on the screen
- If the laundry weight exceeds 5kg - 6kg, the wash cycle may completely stop mid-cycle and will not drain or complete the cycle
- Do not stop a cycle in the middle of a wash or dry. If cycle stops midway, the machine does not automatically deactivate the child lock function to allow door to open. Cycle will need to be restarted from beginning.
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle