


## WASHING MACHINE/DRYER - Haier (Combined Max Load 9kg)

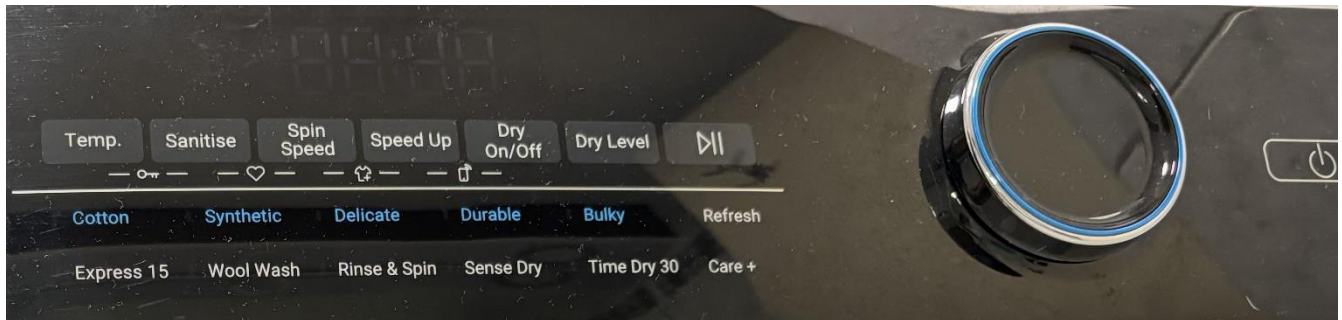

### Wash function

1. To **START WASH function only**, turn dial clockwise and select preferred option and press start.
2. Once cycle starts, child lock function is activated and door cannot be opened. See notes below to open door
3. Do not stop machine mid cycle, it will not deactivate the lock
4. Please **limit weight load to 6 kg** or fill laundry to half the drum size so machine runs efficiently

### Dry function

1. For dryer option, **press the Dryer on/off button**, then turn dial clockwise to select the desired option
2. **Turn main water tap off**
3. Please **limit weight load to 5kg** or fill to half drum load so machine runs efficiently

### PLEASE NOTE

- **Both Wash AND Dry function modes can be pre-set at same time (i.e once Wash cycle is completed, automatically goes on Dry cycle). Alternatively set Wash mode and Dry mode separately after each cycle**
- Do not overuse washing detergent as foam will leak during cycle.
- Please **limit weight load to 5kg - 6kg depending on the cycles selected**. This will enable the cycles run smoothly and avoid the unbalanced error on the screen
- If the laundry weight exceeds 5kg - 6kg, the wash cycle may completely stop mid-cycle and will not drain or complete the cycle
- Do not stop a cycle in the middle of a wash or dry. If cycle stops midway, the machine does not automatically deactivate the child lock function to allow door to open. Cycle will need to be restarted from beginning.
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle