


WASHING MACHINE/DRYER - LG Thin Q (Max Load 5kg)

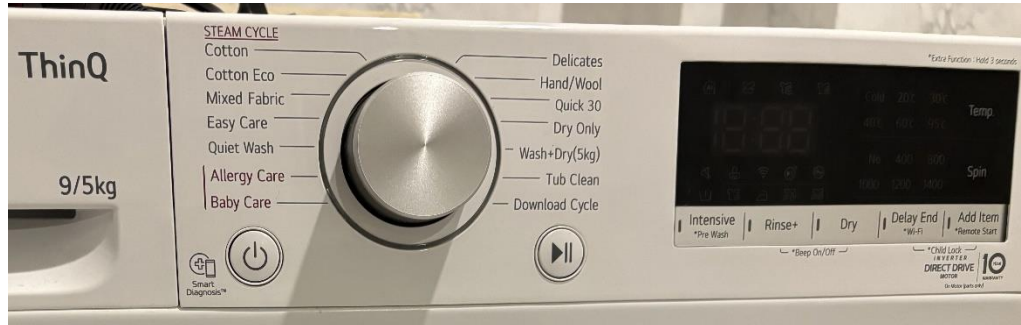

Wash only Function

1. To **START Wash** mode, select preferred option and press start
2. Once cycle starts, child lock function is activated and door cannot be opened. See notes below to open door
3. Do not stop machine mid cycle, it will not deactivate the lock
4. Please **limit weight load to 5 kg** or fill laundry to half drum load so machine runs efficiently

Dry only Function

1. For dry option only, **set the dial on DRY only**
2. Select the temperature and spin speed on the screen located on the right-hand side of the machine
3. Please **limit weight load to 5 kg** or fill to half drum load so machine runs efficiently
4. If you select the **washer/dryer option**, please also select the temperature and spin speed on the screen located on the right-hand side of the machine
5. Once cycle starts, the child lock function will be activated.
6. Once Wash cycle is completed, it will automatically switch to Dry mode

PLEASE NOTE

- **Both Wash AND Dry function modes can be pre-set at same time (i.e. once Wash cycle is completed, automatically goes on Dry cycle). Alternatively set Wash mode and Dry mode separately after each cycle**
- Do not overuse washing detergent as foam will leak during cycle.
- Please **limit weight load to 5kg** so that the cycles run smoothly and avoid the unbalanced error on the screen
- If the laundry weight exceeds 5kg, the wash cycle may completely stop mid-cycle and will not drain or complete the cycle
- Do not stop a cycle in the middle of a wash or dry.
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle