


WASHING MACHINE/DRYER - LG WD14030RD6 (Max Load 4kg)

Wash only Function

1. To **START Wash** mode, select preferred option and press start
2. Once cycle starts, child lock function is activated and door cannot be opened. See notes below to open door
3. Do not stop machine mid cycle, it will not deactivate the lock
4. Please **limit weight load to 4 kg** or fill laundry to half drum load so machine runs efficiently
5. **QUICK cycle** minimum 30 mins

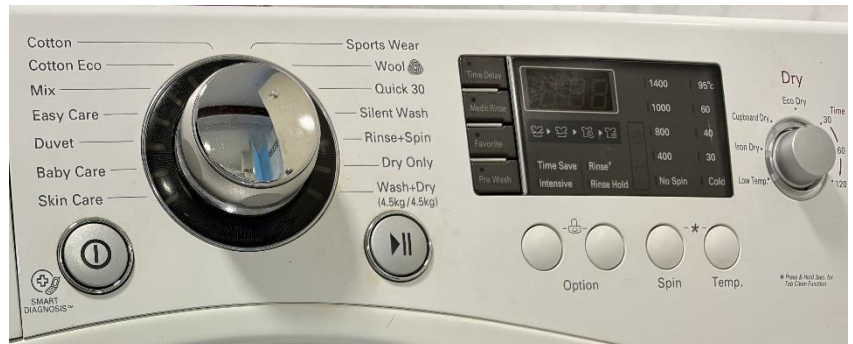

Dry only Function

1. For Dryer option only, **set the dial on DRY only** and select the drying mode. Button at the end of the right-hand side of the machine
2. For **light clothing**, select **iron mode** or 30, 60 or 120 mins
3. For bulky or **thick clothing**, please select **cupboard mode** option
4. Please **limit weight load to 4 kg** or fill to half drum so machine runs efficiently and avoid stopping mid-cycle
5. If you select the **washer/dryer option**, you will also need to select the **Dryer mode prior to starting the cycle**. Button at the end of the right-hand side of the machine, set either by choosing the temperature or cupboard mode or iron mode.
6. Once cycle starts, the child lock function will be activated. Please do not stop machine mid cycle as it will not deactivate the lock to allow door to open
7. Once Wash cycle is completed, it will automatically switch to Dry mode

PLEASE NOTE

- **Both Wash AND Dry function modes can be pre-set at same time (i.e once Wash cycle is completed, automatically goes on Dry cycle). Alternatively set Wash mode and Dry mode separately after each cycle**
- Do not overuse washing detergent as foam will leak during cycle.
- Please **limit weight load to 4kg** so that the cycles run smoothly and avoid the unbalanced error on the screen.
- Do not stop a cycle in the middle of a wash or dry. The machine will not deactivate the child lock function. To deactivate the child lock, turn power off at the power point and please allow 5 mins for the machine to re-set. Cycle will need to re-start from beginning
- If the laundry weight exceeds 4kg, the wash cycle may completely stop mid-cycle and will not drain or complete the cycle
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle
- Wash AND Dry programme take minimum 4 hours