


WASHING MACHINE/DRYER – LG WD14700RD (Max Load 4kg)

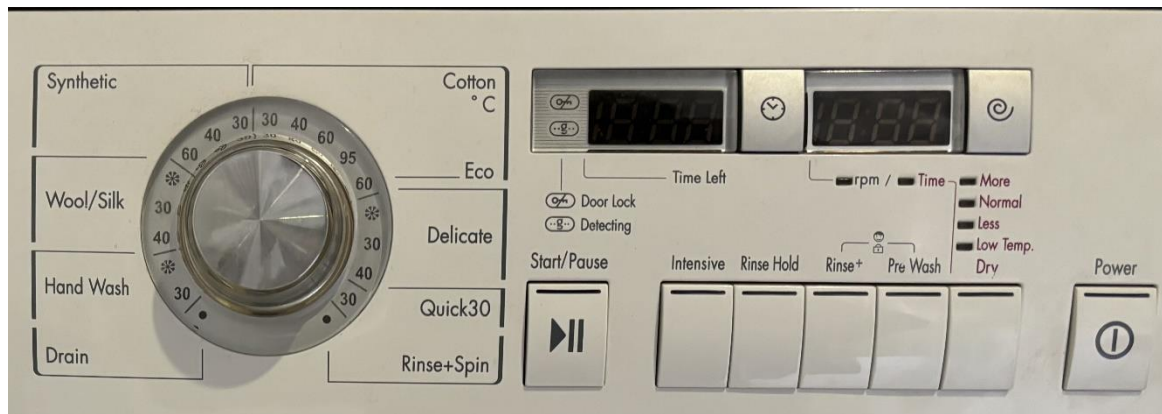

Wash Function

1. To **START Wash** mode, select preferred option and press start
2. Once cycle starts, child lock function is activated and door cannot be opened. See notes below to open door
3. Do not stop machine mid cycle, it will not deactivate the lock
4. Please **limit weight load to 4 kg** or fill laundry to half drum load so machine runs efficiently

Dry Function

1. To use dryer, press the **DRY button**
2. Press DRY button again to **SELECT TEMPERATURE** or other pre-set drying options
3. Dry cycle takes **minimum 2 hrs** to complete depending on selected function

PLEASE NOTE

- Do not overuse washing detergent as foam will leak during cycle.
- Please **limit weight load to 4kg** so that the cycles run smoothly and avoid the unbalanced error on the screen
- If the laundry weight exceeds 4kg, the wash cycle may completely stop mid stage and will not drain or complete the cycle
- Do not stop a cycle in the middle of a wash or dry. If cycle stops mid-cycle, the machine does not automatically deactivate the child lock function to allow door to open. To deactivate the child lock, turn power off at the power point. Please allow 5 minutes for machine to re-set. Cycle will need to be restarted from beginning
- If the dryer is overloaded, laundry will not be fully dried and may still be damp. You will need to run another dry cycle.